




1. FOOTWELL

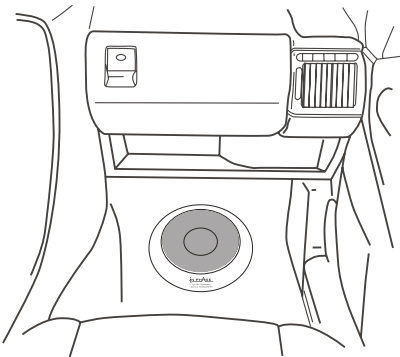

2. UNDER SEAT

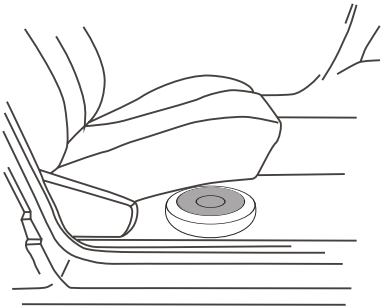

3. BOOT

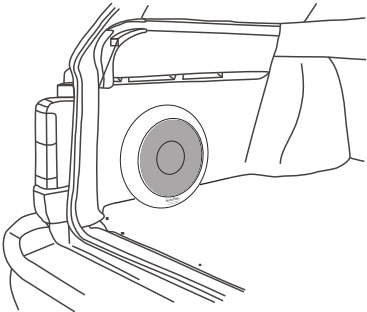

INSTALLATION INSTRUCTIONS

Please read this manual carefully and follow the instructions for installation. We guarantee that this product has been checked for proper functioning by our quality control department before shipping.

The Ultra Compact Active Subwoofer may only be installed in motor vehicles which have a 12 volt negative terminal connected to chassis ground. The positive power cable from the battery to the Subwoofer is provided with a main fuse at a distance of 30cm (max) from the battery. (Please use the yellow cable supplied)

Before you start installing the product disconnect the car battery at the negative terminal (observe the safety notes of the vehicle manufactures and all safety factors such as coded head units)

We would urge you to have the installation work carried out by a specialist for verification of correct and safe installation.


Please install the Subwoofer in a dry location where there is sufficient air circulation.

For safety reasons we would advise that the subwoofer is secured using the brackets and screws supplied.


Before drilling holes for the screws carefully examine the area around the installation position and make sure that there are no electrical cables or component hydraulic brake line or any part of the petrol tank located behind the mounting surface.

MOUNTING:

1. Decide where you are going to install the unit.
2. Once the location has been determined, place the Subwoofer into position with the mounting brackets attached. Using a felt tip pen or pencil mark the two holes to be drilled for mounting. DO NOT use the subwoofer as a template for drilling. It is very easy to damage the subwoofer enclosure surface in this manner.
3. Remove Subwoofer. Drill two 3.0 mm holes into mounting surface. If you want to mount the Subwoofer onto MDF or wood panel, drill four 2.5mm diameter holes into mounting surface.
4. If possible, test the system to ensure it is operating correctly before final mounting of the Subwoofer.
5. Mount the Subwoofer using the supplied 2 self tapping screws.




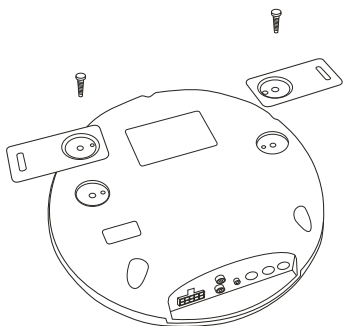


Attaching the Mounting Brackets

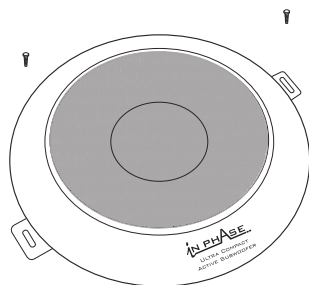

Attaching to Surface (Mounting)

SUBWOOFER OVERVIEW & WIRING

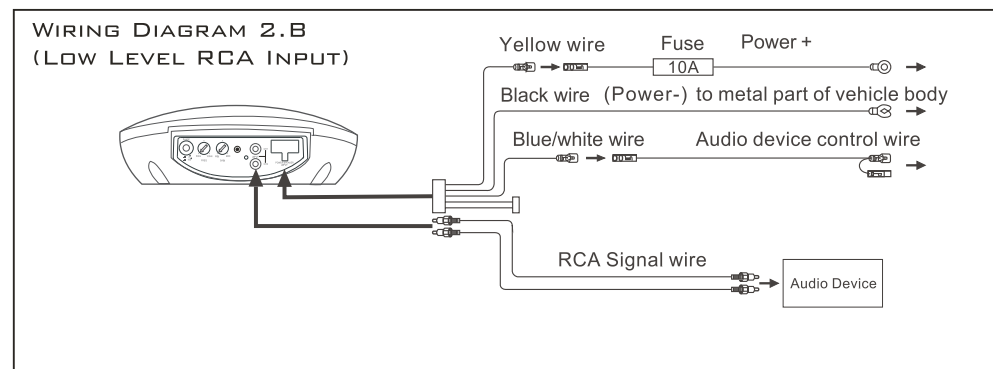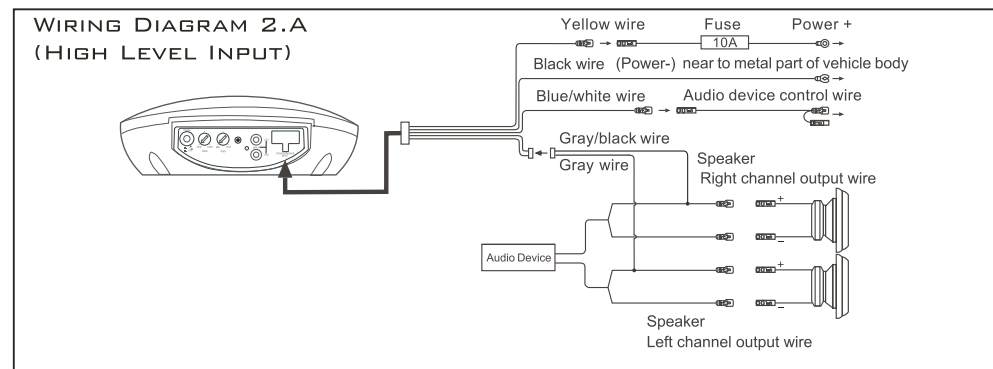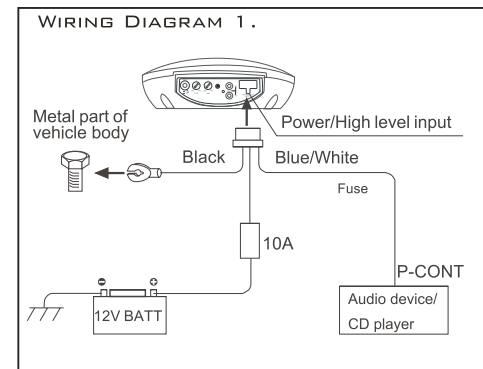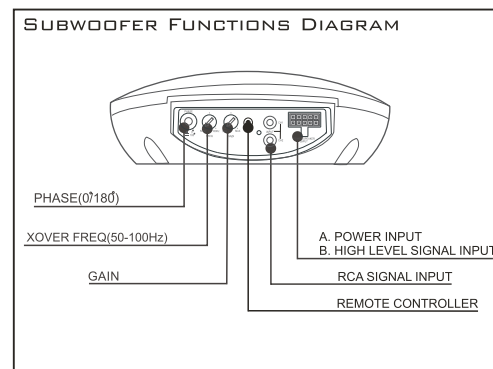

Note: Use either RCA line level or speaker level input. Do not connect both at the same time.